



RGS REBAR

SHORTCUT KEYS





| Shortcut | Command |
|----------|---------------------------------------|
| JP | Job Properties |
| DP | Drawing Properties |
| NBM | Draw Bar Man |
| NR | Draw Range |
| SPR | Split Range |
| CR | Combine Range |
| CNS | Convert to Single |
| CNM | Convert to Multi |
| ABA | Add Bars |
| RBA | Remove Bars |
| RDIM | Place Range Dimension |
| NVB | Add Bar View |
| NVR | Add Range View |
| C2B | Convert View |
| DA | Add Donut |
| DLP | Pre Leader |
| L1 | Leader 1 |
| L2 | Leader 2 |
| L3 | Leader 3 |
| L4 | Leader 4 |
| CA | Place Callout |
| PTA | Place Varying Table |
| LB | Place Label |
| EM | Place Element Mark |
| HLO | Hide Location |
| SLO | Show Location |
| BEL | Base Elevation |
| REL | Relative Elevation |
| RSP | Rebar Spread |
| CVTO | Change View Toggle |
| CRL | Create Library |

| Shortcut | Command |
|----------|---|
| INL | Insert Library |
| MP | Match Properties |
| TBS | Transpose Bendshape |
| CBV | Change Bar View |
| ALC | Change Alphacode |
| FC | Find Callout |
| AXY | Align XY |
| ARO | Align Rotated |
| A2L | Align to Line |
| RES | Redraw Entities |
| RAS | Reassign Barmarks |
| CLS | Clash Detection |
| ADWG | Audit Drawing |
| ESP | Edit Bends |
| IMB | Import Bends |
| EXB | Export Bends |
| BBS | Place BBS |
| CCBBS | Place BBS Control Code |
| PLIST | Place List |
| CCPL | Place List Control Code |
| EPL | Export Placing List |
| UPL | Update Placing List |
| TF | Takeoff |
| UTCC | Untakeoff Control Code |
| UTB | Untakeoff Bars |
| UTFE | Untakeoff Fence |
| UTFI | Untakeoff Filter |
| UTEM | Untakeoff EMark |
| UTEF | Untakeoff EFence |
| UTEFI | Untakeoff EFilter |
| TCN | Takeoff Color On |



| Shortcut | Command |
|----------|---------------------------------------|
| TCF | Takeoff Color Off |
| PBE | Place Bend Shapes |
| BST | Bar Status |
| DW | Drawing Weight Report |
| CERR | Create Error Log File |
| CSC | Create Scale Area |
| RSC | Resize Scale Area |
| COSC | Copy Scale Area |
| RNO | Release Notes |
| QUR | Quick Reference |
| CMD | Command Reference |
| FAQ | FAQ |
| CHA | Bend Chart |
| RGS | About us |
| NB | Draw Bar |
| DSR | Single Range |
| DMR | Multi Range |
| SLP | Single Line Split |
| DLP | Double Line Split |
| CNR | Convert Range |
| SB | Show Bars |
| ARB | Add Remove Bars |
| NV | Add View |
| DL | Add Leader |
| ELO | Element Location |
| PEL | Place Elevation |
| DLI | Details Library |
| ACALL | Change Alpha Code All |
| ACSE | Alpha Code Select |
| ACFE | Alpha Code Fence |
| ACFI | Alpha Code Filter |

| Shortcut | Command |
|----------|----------------------------------|
| ACA | Align Callouts |
| RDR | Redraw Select |
| UT | Untakeoff |
| TCO | Takeoff Color |
| PWE | Place weight |
| SCA | Scale Area |
| CVS | Change to Side |
| CVP | Change to Plan |
| CVL | Change to Left |
| CVSE | Change to Section |
| CVPR | Change to Profile |
| RDB | Redraw Bars |
| RDR | Redraw Ranges |
| RDL | Redraw Leaders |
| SSTS | Single ST Single |
| SSTA | Single ST Alter |
| SSTM | Single ST Multi |
| RRS | Radial Single |
| RRA | Radial Alter |
| RRM | Radial Multi |
| PWA | Place Weight All |
| PWS | Place Weight Summary |
| PWSE | Place Weight Selection |
| PWF | Place Weight Fence |
| PWFI | Place Weight Filter |
| PWEL | Place Weight Element |
| EBBS | Export BBS |
| UBBS | Update BBS |
| | |
| | |