RGS REBAR

INSTALLATION GUIDE

PREFACE

This material is intended to be a Installation Guide for the users of RGS REBAR. This is not a user manual. This material guides the user on How to install the software in your system.

RGS-REBAR is developed by RGS Construction Technologies Pvt. Ltd. Our Corporate office is located at Chennai, India.

Address:

Old # 182 / New # 271,

Ankur Manor,

Poonamallee High Road,

Kilpauk, Chennai 600 010.

For more information, visit us at www.viskartech.com

Administrative Permission Requirements

To install RGS REBAR SOFTWARE, you must have administrator permissions. You do not need to have domain administrative permissions. See your system administrator for information about administrative permissions.

You do not need administrator permissions to run RGS REBAR . You can run the program as a limited user.

System Requirements

Software Requirements:

- Microsoft Windows 10 (64-bit only) or
- Windows 8.1 (32-bit&64 bit)
- Windows 7 SP1 (32-bit & 64-bit)

AutoCAD Version Required:

- For 32-bit : AutoCAD 2010/ 2011/ 2013/ 2014/ 2016.
- For 64-bit : AutoCAD 2010/ 2011/ 2012/ 2013/ 2014/ 2015/ 2016/ 2017/ 2018.

Hardware Requirements:

- 1 Ghz or faster processor.
- Ram:
- 32-bit: 2 GB, 64-bit: 4 GB
- Disk space: 4.0 GB

Step 1: Select the preferred language and click ok.

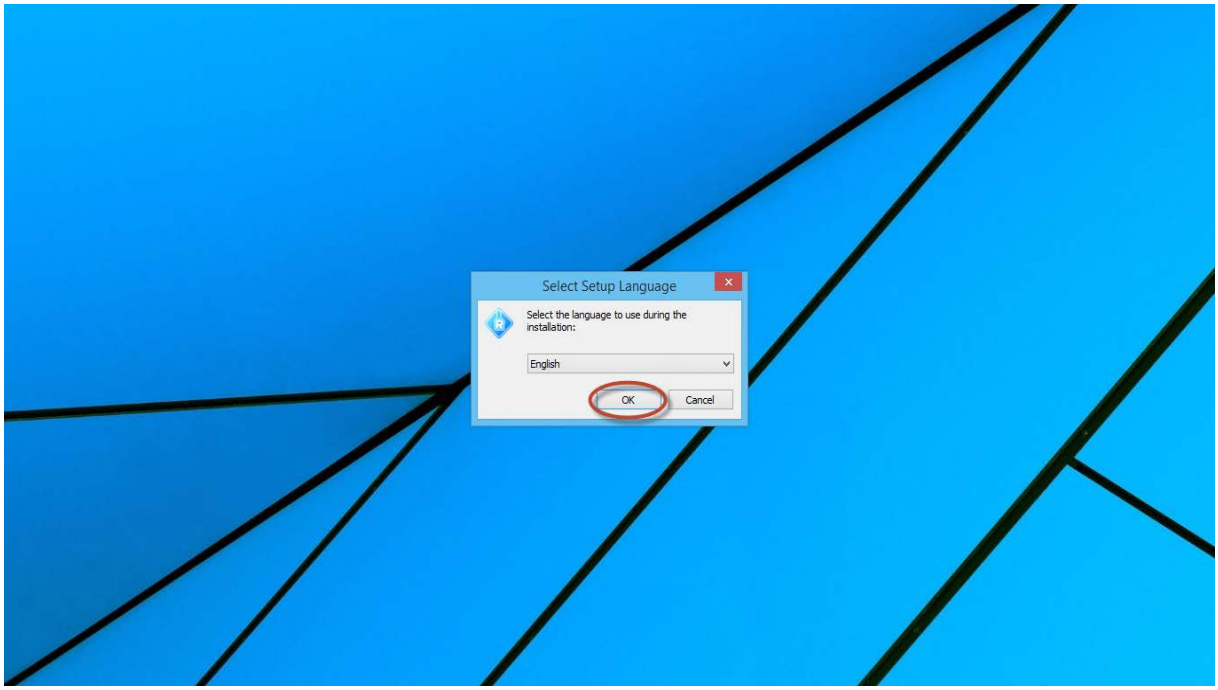

Step 2: Click on the next button to continue the setup.

Step 3: Accept the agreement and click on next button.

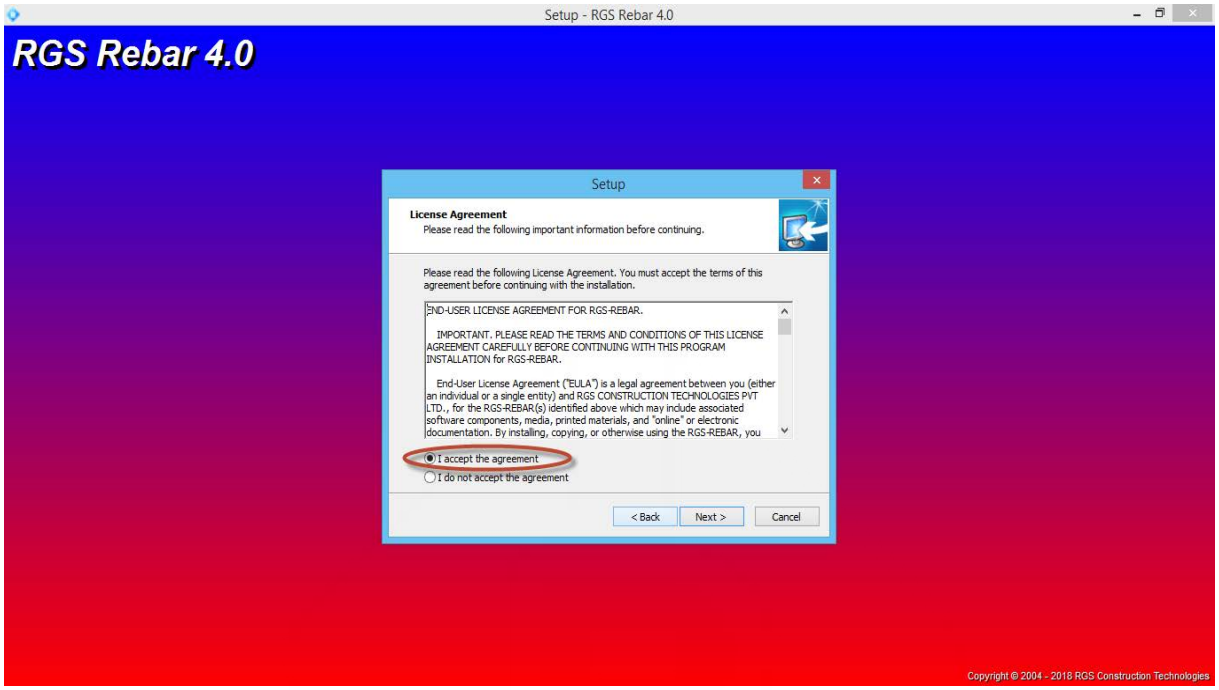

Step 4: Click the install button to start the setup.

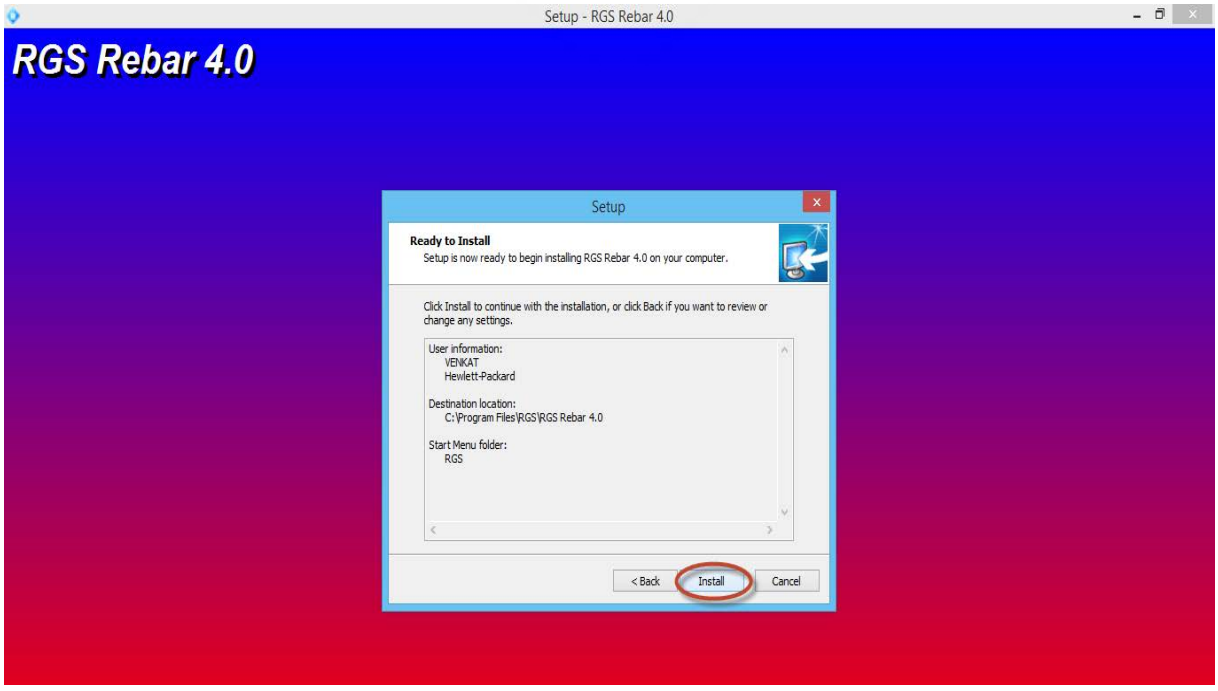

Step 5: Wait until the setup extracts the files.

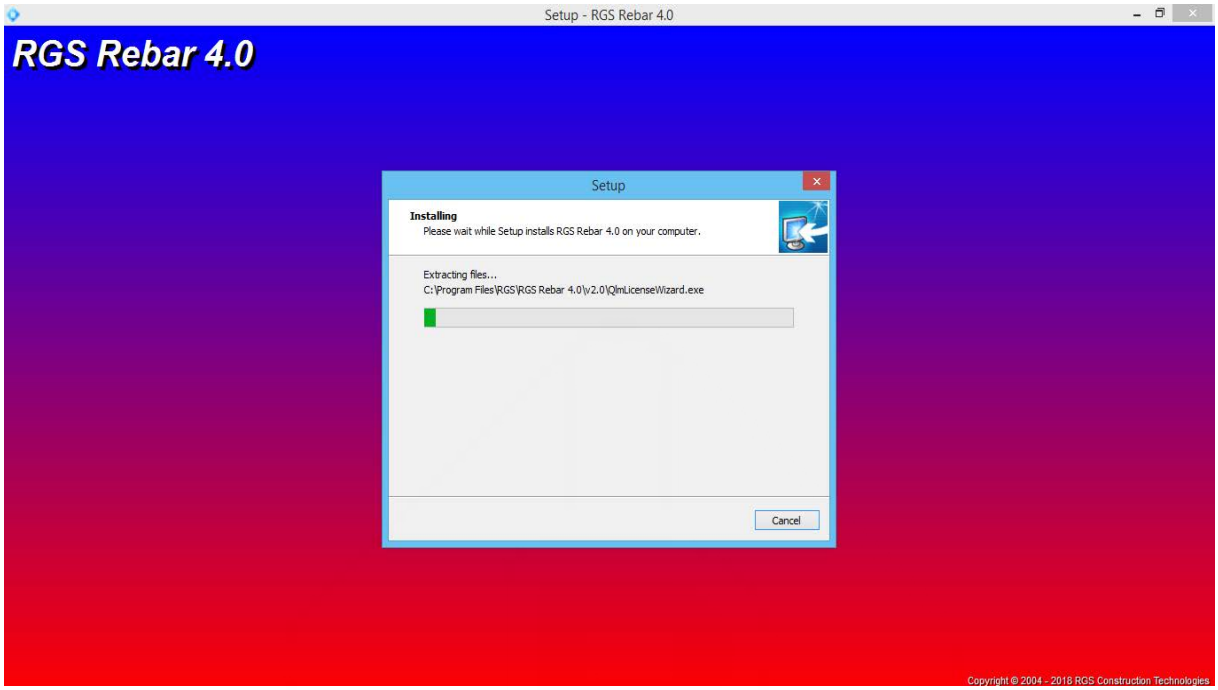

Step 6: Click on the next button on Visual Basic Power Packs 3.0.

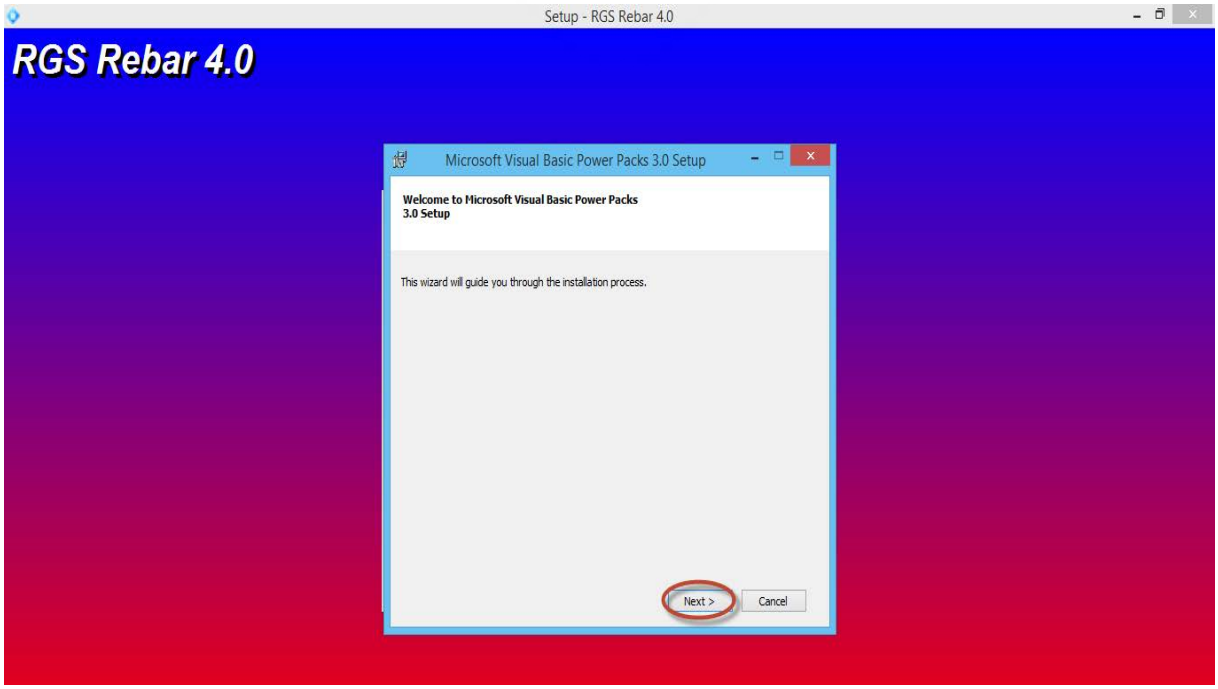

Step 7: Accept the agreement and click install.

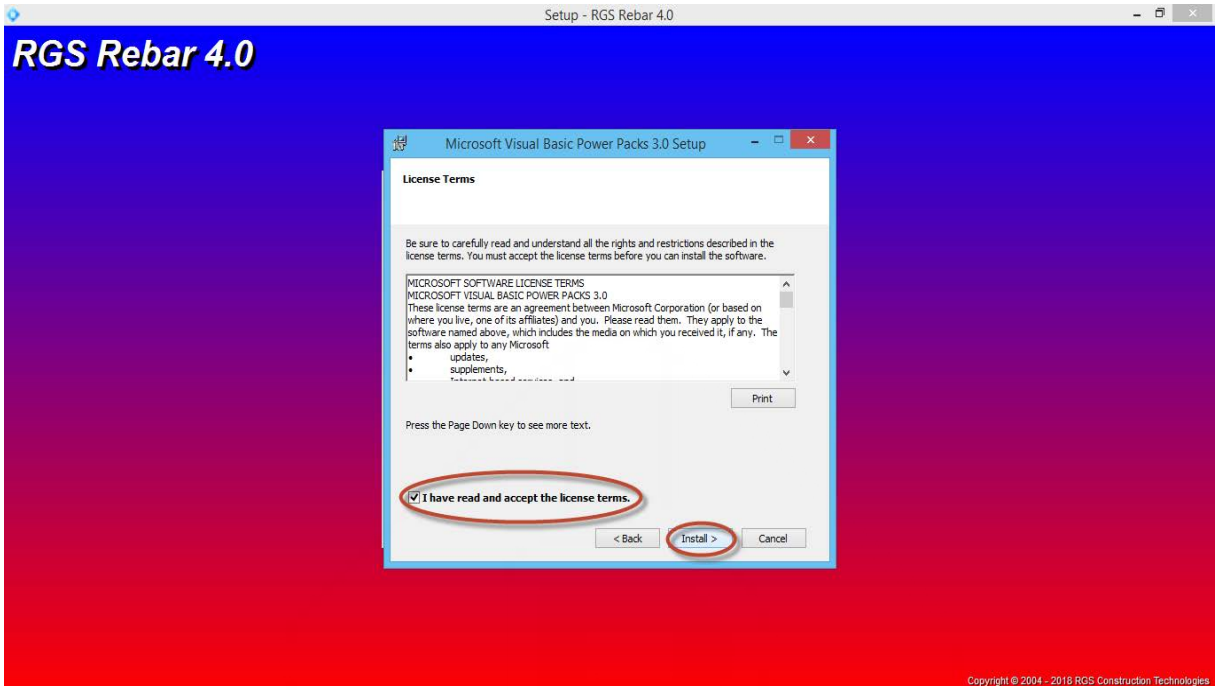

Step 8: Click finish button to complete the installation

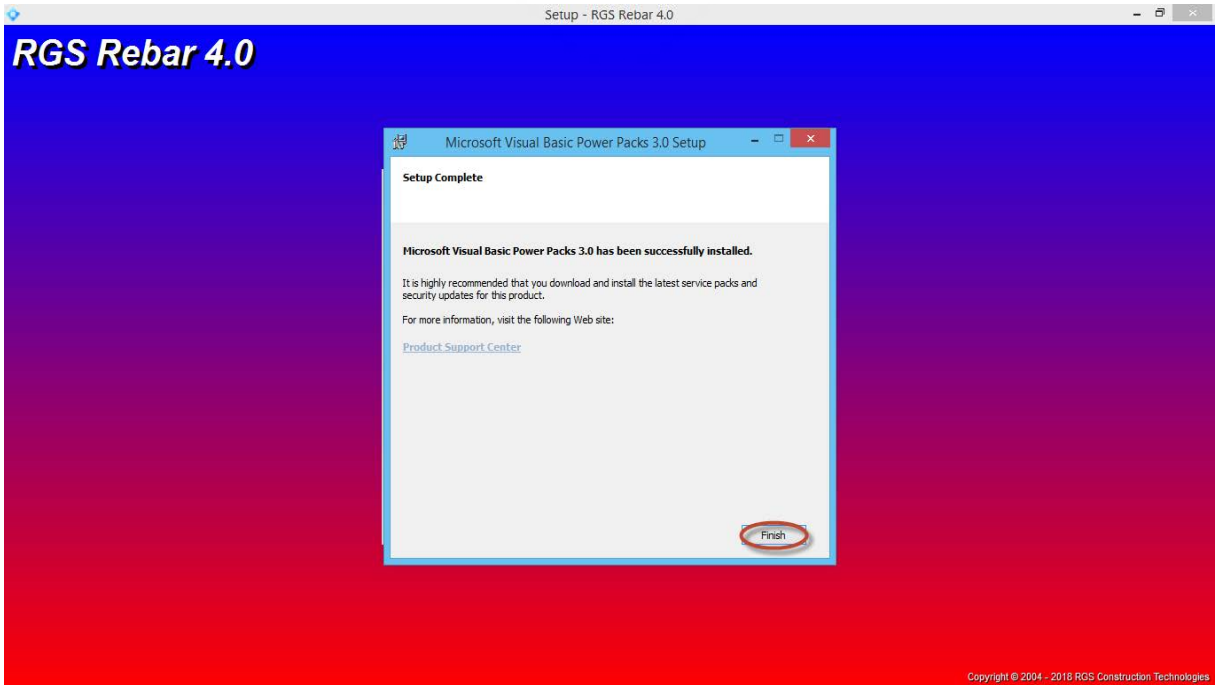

Step 9: Finish the setup and wait until RGS Rebar launches.

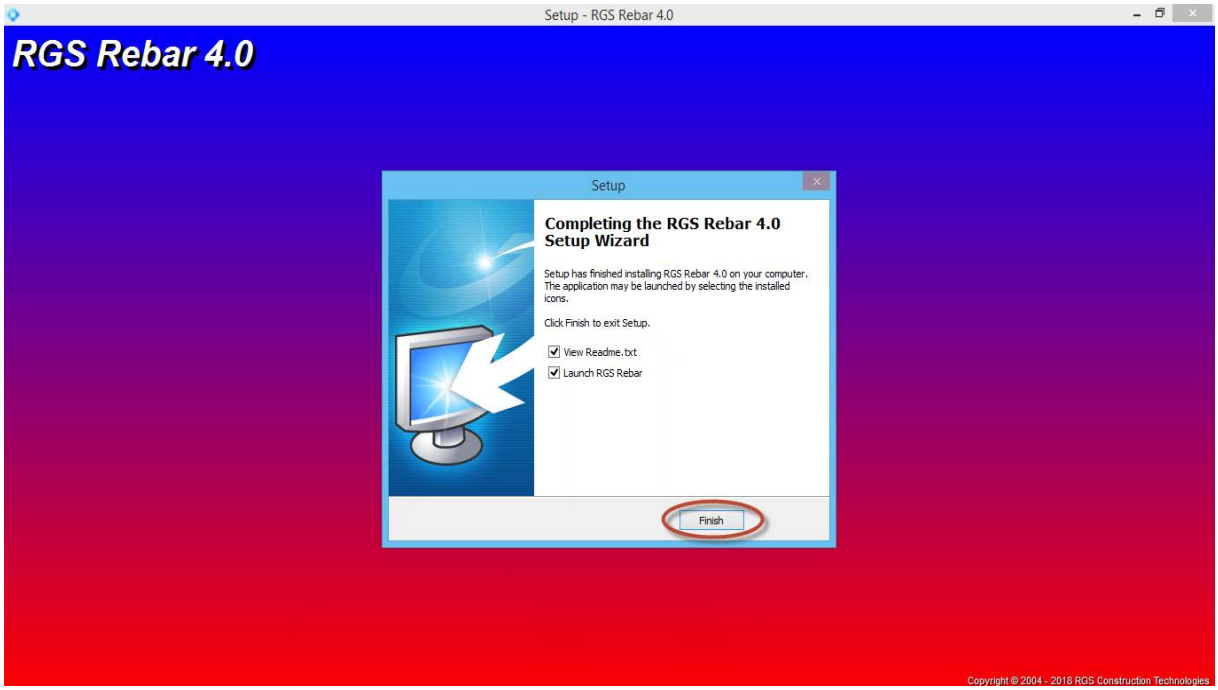

Step 10:

Activating License

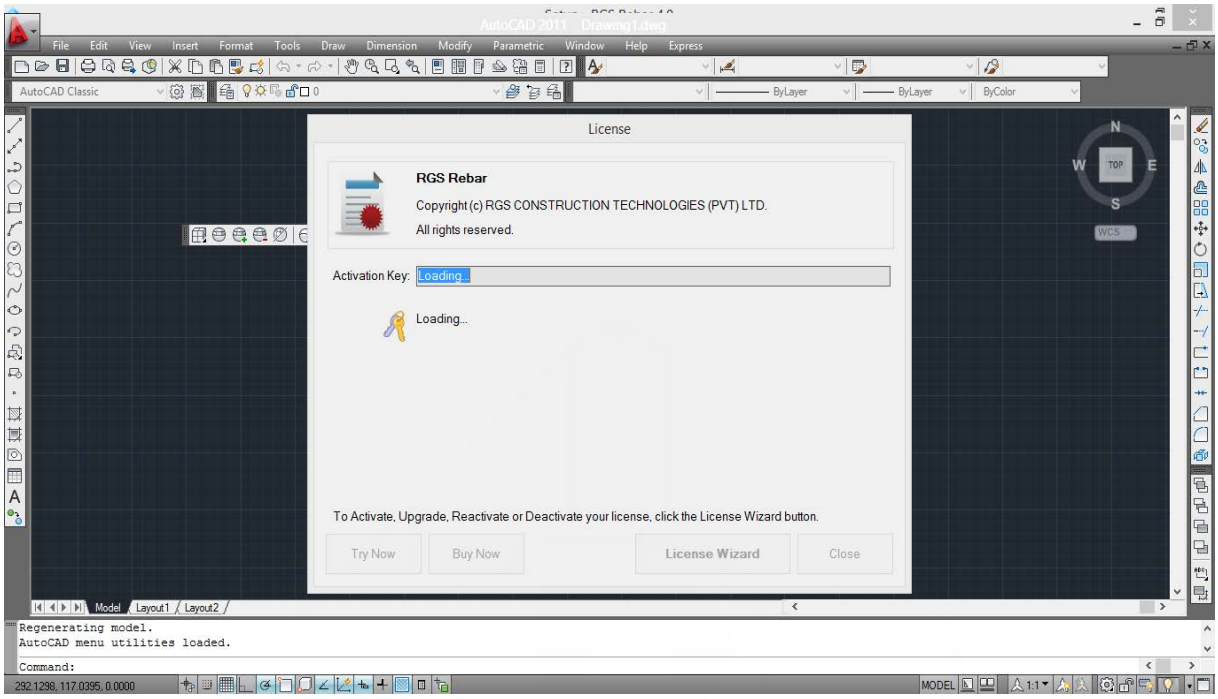

Click try now button on the license dialog box

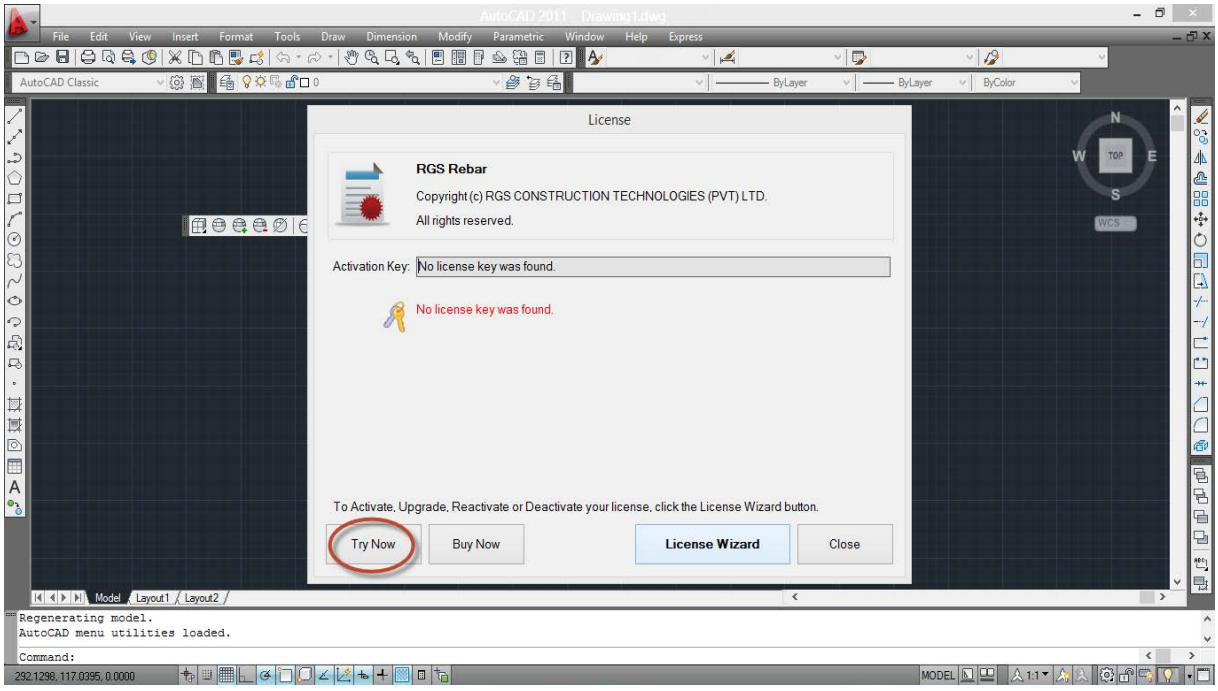

Trial license has been successfully activated.

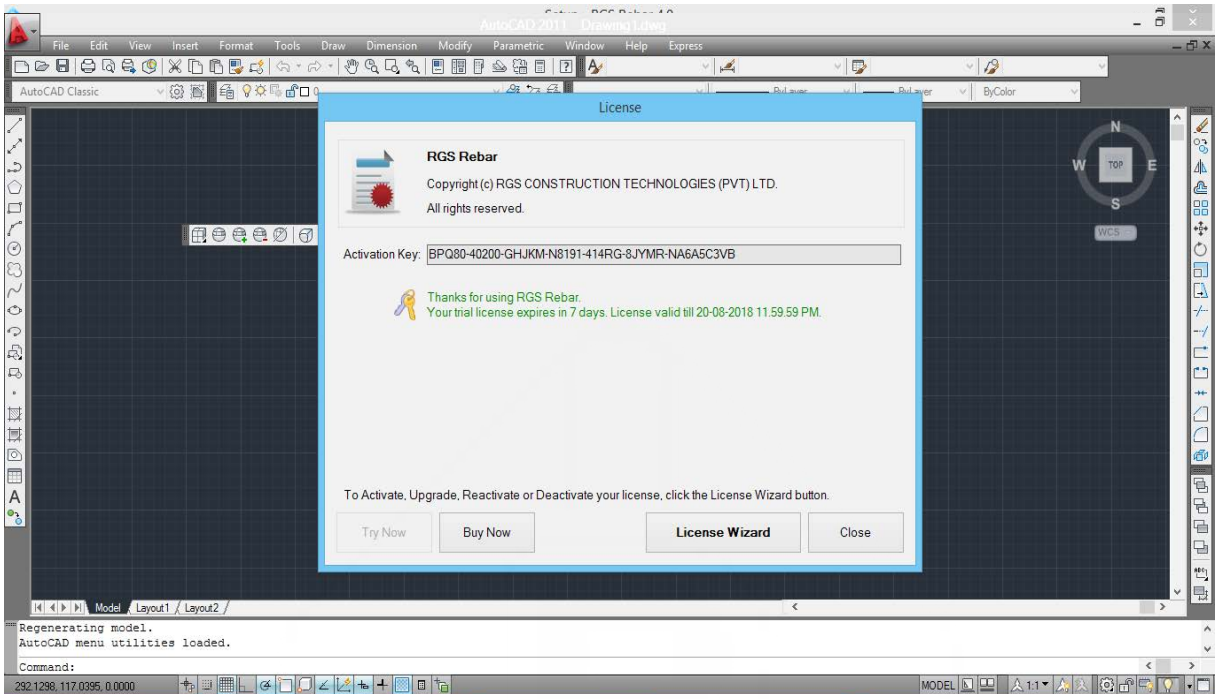
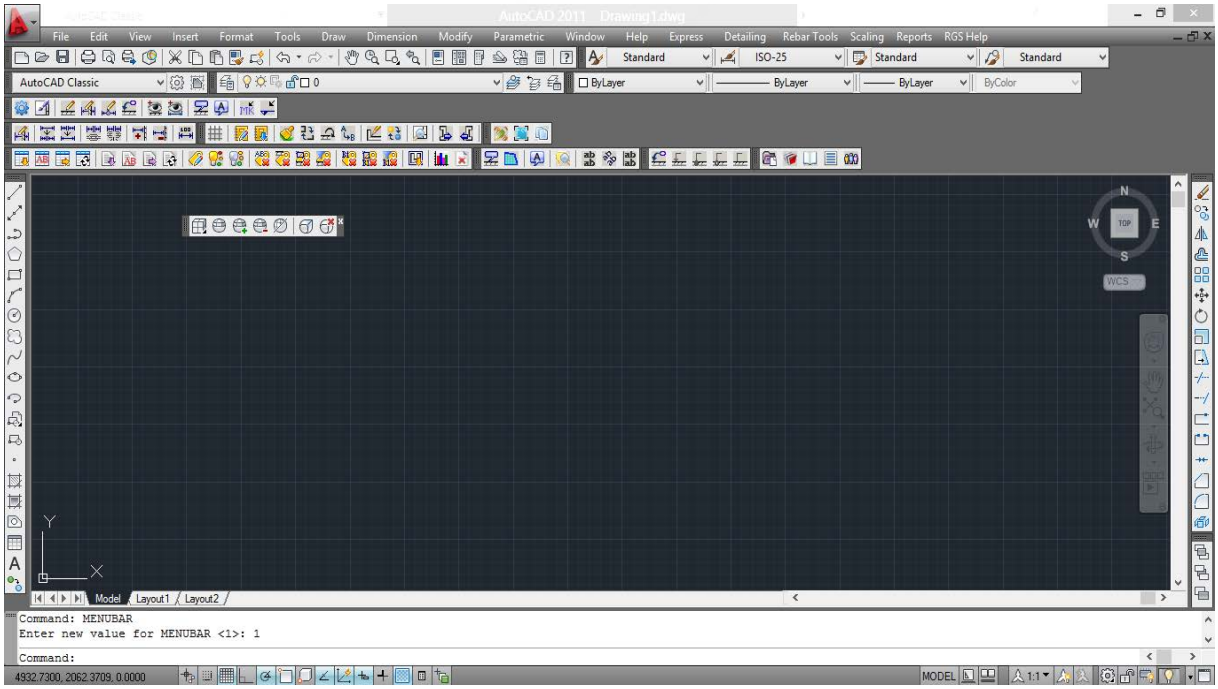
Wait until RGS Rebar loads the dialog box.